


# The Parts List of Model 1E40F-5A Engine

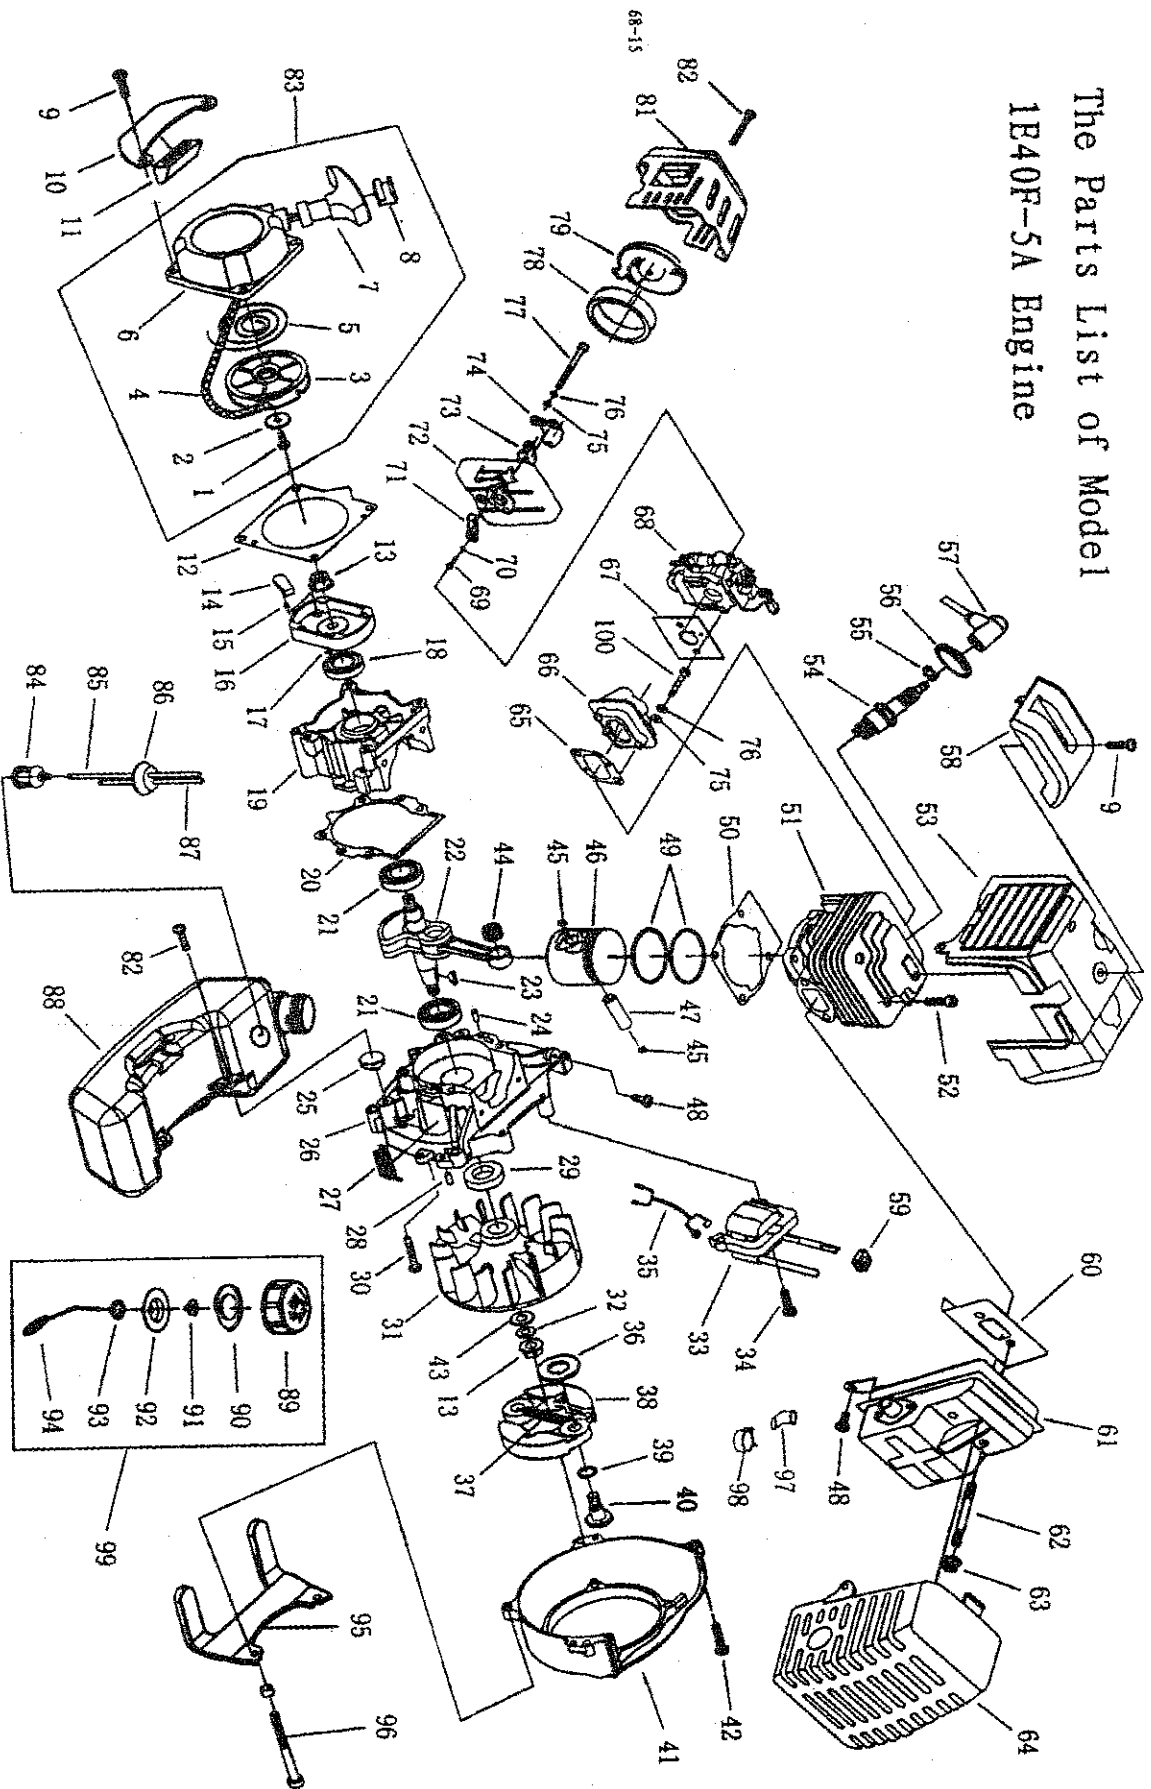

# 1E40F-5A GASOLINE ENGINE (1)

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
1	GB67	Screw M5X12-9.8-DZ	1	26	1E40F-5.8-1	Crank Case	1
2	1E40F-5.11-2	Washer	1	27	1E40F-5.8-3	Guide Cover	1
3	1E40F-5.11-1	Start Rope Reel	1	28	GB119	Pin B4X10	2
4		Rope	1	29	1E40F-5.9	Oil-seal	1
5	1E40FP-3Z.4-7	Recoil Spring	1	30	GB9074.4	Screw M5X30	4
6	1E40F-5.11.1	Start Cover Ass'y	1	31		Fly Wheel	1
7	1E40FP-3Z.4-2	Start Handle	1	32	GB859	Washer 8	1
8	1E40FP-3Z.4-10	Ring	1	33		Stator	1
9	GB9074.4	Screw M5X20	5	34	GB9074.13	Bolt M5X20	2
10	1E40F-5A-4	Stand	1	35	1E40F-5.3.1	Cord Comp.	1
11	1E40F-5A-2	Rubber Cover	1	36	1E36F-3	Washer B	2
12	1E40F-5-10	Gasket	1	37	1E36F-2C.4-1	Spring	1
13	GB6170	Nut M8	2	38	1E36F-2C.4.1	Expander	2
14	1E46FP.4-2	Start Claw	1	39	1E40F-5-11	Washer	2
15	1E36F.1.2-2	Start Spring	1	40	1E40F-5-12	Screw Pin	2
16	1E40F-5.7-1	Start Reel	1	41	1E40F-5-9	Fan Cover	1
17	GB896	Stop Ring 4	1	42	GB9074.13	Bolt M5X25	2
18	1E36F.2	Oil-seal	1	43	GB97.1	Washer 8	1
19	1E40F-5.8-2	Crank Case	1	44	1E40F-5.4-2	Bearing	1
20	1E40F-5.8-4	Gasket	1	45	1E40F-03.02.01	Ring	2
21	GB/T276	Bearing 6202/P6	2	46	1E40F-5.4-1	Piston	1
22	1E40F-5.4.1	Crank Shaft	1	47	1E46FP.6-3	Piston Pin	1
23	GB1099	Key 3X13	1	48	GB9074.4	Bolt M5X12	3
24	GB119	Pin B5X12	2	49	1E40FP-3Z.3-5	Piston Ring	2
25	1E40F-5A-3	Rubber Washer	2	50	1E40F-5-6	Gasket	1

STATOR REF 1E34F-E-3.2

SI DE LA POLEA INTERNA DEL ARRANQUE SALEN DOS ALAMBRES, EL CÓDIGO ES 1E36FE-7

## 1E40F-5A GASOLINE ENGINE (2)

NO.	Part No.	Part Name	Qty.	NO.	Part No.	Part Name	Qty.
51	1E40F-5-4	Cylinder	1	76	GB93	Washer 5	4
52	GB70	Screw M5X20	4	77	GB/T70.1	Screw M5X55	2
53	1E40F-5.5	Guide Cover Ass'y	1	78	1E34F.1-1	Filter Net	1
54	L6 (LD)	Spark Plug	1	79	1E40F-5A.1-2	Inside Cover	1
55		Spring	1	80	GB3452.1	o-Washer 3.15x1.8	1
56		Plug Cap	1	81	1E40F-5A.1-1	Outside Cover	1
57		Cap	1	82	GB9074.4	Screw M5X16	3
58	1E40F-5-8	Cover	1	83	1E40F-5.11	Starter	1
59	1E40F-5.3-1	Plug	1	84	1E34F.9.2-3A	Cleaner Cover	1
60	1E40F-5-5	Gasket	1	85	1E34F.9.2-2	Fuel Pipe	1
61	1E40F-5.2	Muffler	1	86	1E36FF.8.1-1	Plug	1
62	1E40F-5-13	Bolt	2	87	GB/T13527.1	Fuel Pipe	1
63	GB6177	Nut M6	2	88	1E40F-5A.4.1	Fuel Tank	1
64	1E40F-5-7	Muffler Cover	1	89	1E32FL.6.2-1	Fuel Tank Lid	1
65	1E40F-5-2	Admitting Pipe	1	90	CG420.1.3.1-2	Gasket	1
66	1E40F-5A.2	Admitting Pipe	1	91	EB-415.4.1.1-1	Airscoop	1
67	1E40F-5A-1	Gasket	1	92	1E32FL.6.2-2	Inside Cover	1
68	1E40F-5A.8	Carburetor	1	93	1E32FL.6.2-3	Lid	1
69	GB845	Screw ST2.9X6.5	1	94	1E32FL.6.2-4	Chain	1
70	GB97.1	Washer 3	1	95	1E40F-5A.3	Stand	1
71	1E40F-5A.1.1-1	Choke Handle	1	96	GB9074.13	Screw M5X30	2
72	1E40F-5A.1.1.1	Inside Cover	1	97	1E40F-5.10-1	Outlet	
73	1E40F-5A.1.1-2	Choke	1	98	1E40F-5.10-2	Stop Ring	
74	1E40F-5A.1.2	Baffle	1	99	1E32FL.6.2	Fuel Tank Lid COMP.	1
75	GB97.1	Washer 5	4	100	GB70	Screw M5X25	2